

LECT – 4/5

Instructions-Language of Computer

Instruction Set

- The set of instructions of a computer
- Different computers have different instruction sets
 - But with many aspects in common
- Early computers had very simple instruction sets
 - Simplified implementation
- Many modern computers also have simple instruction sets



The MIPS Instruction Set

- Used as the example throughout the book
- Stanford MIPS commercialized by MIPS Technologies (www.mips.com)
- Large share of embedded core market
 - Applications in consumer electronics, network/storage equipment, cameras, printers, ...
- Typical of many modern ISAs
 - See MIPS Reference Data tear-out card, and Appendixes B and E

Arithmetic Operations

- Add and subtract, three operands
 - Two sources and one destination

add a, b, c # a gets b + c
- All arithmetic operations have this form
- *Design Principle 1: Simplicity favours regularity*
 - Regularity makes implementation simpler
 - Simplicity enables higher performance at lower cost



Arithmetic Example

- C code:

```
f = (g + h) - (i + j);
```

- Compiled MIPS code:

```
add t0, g, h    # temp t0 = g + h
add t1, i, j    # temp t1 = i + j
sub f, t0, t1   # f = t0 - t1
```

Register Operands

- Arithmetic instructions use register operands
- MIPS has a 32×32 -bit register file
 - Use for frequently accessed data
 - Numbered 0 to 31
 - 32-bit data called a “word”
- Assembler names
 - \$t0, \$t1, ..., \$t9 for temporary values
 - \$s0, \$s1, ..., \$s7 for saved variables
- *Design Principle 2: Smaller is faster*
 - main memory: millions of locations



Register Operand Example

- C code:

```
f = (g + h) - (i + j);
```

- f, ..., j in \$s0, ..., \$s4

- Compiled MIPS code:

```
add $t0, $s1, $s2
```

```
add $t1, $s3, $s4
```

```
sub $s0, $t0, $t1
```

Memory Operands

- Main memory used for composite data
 - Arrays, structures, dynamic data
- To apply arithmetic operations
 - Load values from memory into registers
 - Store result from register to memory
- Memory is byte addressed
 - Each address identifies an 8-bit byte
- Words are aligned in memory
 - Address must be a multiple of 4
- MIPS is Big Endian
 - Most-significant byte at least address of a word
 - *c.f.* Little Endian: least-significant byte at least address



Memory Operand Example 1

- C code:

```
g = h + A[8];
```

- g in \$s1, h in \$s2, base address of A in \$s3

- Compiled MIPS code:

- Index 8 requires offset of 32
 - 4 bytes per word

```
lw    $t0, 32($s3)    # load word  
add   $s1, $s2, $t0
```

offset

base register

Memory Operand Example 2

- C code:

```
A[12] = h + A[8];
```

- h in \$s2, base address of A in \$s3

- Compiled MIPS code:

- Index 8 requires offset of 32

```
lw    $t0, 32($s3)    # load word
add   $t0, $s2, $t0
sw    $t0, 48($s3)    # store word
```

Registers vs. Memory

- Registers are faster to access than memory
- Operating on memory data requires loads and stores
 - More instructions to be executed
- Compiler must use registers for variables as much as possible
 - Only spill to memory for less frequently used variables
 - Register optimization is important!



Immediate Operands

- Constant data specified in an instruction
`addi $s3, $s3, 4`
- No subtract immediate instruction
 - Just use a negative constant
`addi $s2, $s1, -1`
- *Design Principle 3: Make the common case fast*
 - Small constants are common
 - Immediate operand avoids a load instruction



The Constant Zero

- MIPS register 0 (\$zero) is the constant 0
 - Cannot be overwritten
- Useful for common operations
 - E.g., move between registers
add \$t2, \$s1, \$zero

Unsigned Binary Integers

- Given an n-bit number

$$x = x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \dots + x_12^1 + x_02^0$$

- Range: 0 to $+2^n - 1$

- Example

- $0000\ 0000\ 0000\ 0000\ 0000\ 0000\ 0000\ 1011_2$
= $0 + \dots + 1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0$
= $0 + \dots + 8 + 0 + 2 + 1 = 11_{10}$

- Using 32 bits

- 0 to $+4,294,967,295$



2s-Complement Signed Integers

- Given an n-bit number

$$x = -x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \dots + x_12^1 + x_02^0$$

- Range: -2^{n-1} to $+2^{n-1} - 1$

- Example

- $1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1111\ 1100_2$
 $= -1 \times 2^{31} + 1 \times 2^{30} + \dots + 1 \times 2^2 + 0 \times 2^1 + 0 \times 2^0$
 $= -2,147,483,648 + 2,147,483,644 = -4_{10}$

- Using 32 bits

- $-2,147,483,648$ to $+2,147,483,647$

2s-Complement Signed Integers

- Bit 31 is sign bit
 - 1 for negative numbers
 - 0 for non-negative numbers
- $-(-2^n - 1)$ can't be represented
- Non-negative numbers have the same unsigned and 2s-complement representation
- Some specific numbers
 - 0: 0000 0000 ... 0000
 - -1: 1111 1111 ... 1111
 - Most-negative: 1000 0000 ... 0000
 - Most-positive: 0111 1111 ... 1111



Signed Negation

- Complement and add 1
 - Complement means $1 \rightarrow 0, 0 \rightarrow 1$

$$x + \bar{x} = 1111\dots111_2 = -1$$

$$\bar{x} + 1 = -x$$

- Example: negate +2
 - $+2 = 0000\ 0000 \dots 0010_2$
 - $-2 = 1111\ 1111 \dots 1101_2 + 1$
 $= 1111\ 1111 \dots 1110_2$

Sign Extension

- Representing a number using more bits
 - Preserve the numeric value
- In MIPS instruction set
 - `addi`: extend immediate value
 - `lb`, `lh`: extend loaded byte/halfword
 - `beq`, `bne`: extend the displacement
- Replicate the sign bit to the left
 - c.f. unsigned values: extend with 0s
- Examples: 8-bit to 16-bit
 - `+2`: `0000 0010` => `0000 0000 0000 0010`
 - `-2`: `1111 1110` => `1111 1111 1111 1110`



Representing Instructions

- Instructions are encoded in binary
 - Called machine code
- MIPS instructions
 - Encoded as 32-bit instruction words
 - Small number of formats encoding operation code (opcode), register numbers, ...
 - Regularity!
- Register numbers
 - \$t0 – \$t7 are reg's 8 – 15
 - \$t8 – \$t9 are reg's 24 – 25
 - \$s0 – \$s7 are reg's 16 – 23



MIPS R-format Instructions



■ Instruction fields

- op: operation code (opcode)
- rs: first source register number
- rt: second source register number
- rd: destination register number
- shamt: shift amount (00000 for now)
- funct: function code (extends opcode)

R-format Example

op	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

add \$t0, \$s1, \$s2

special	\$s1	\$s2	\$t0	0	add
0	17	18	8	0	32
000000	10001	10010	01000	00000	100000

$00000010001100100100000000100000_2 = 02324020_{16}$

Hexadecimal

- Base 16
 - Compact representation of bit strings
 - 4 bits per hex digit

0	0000	4	0100	8	1000	c	1100
1	0001	5	0101	9	1001	d	1101
2	0010	6	0110	a	1010	e	1110
3	0011	7	0111	b	1011	f	1111

- Example: eca8 6420
 - 1110 1100 1010 1000 0110 0100 0010 0000

MIPS I-format Instructions



- Immediate arithmetic and load/store instructions
 - rt: destination or source register number
 - Constant: -2^{15} to $+2^{15} - 1$
 - Address: offset added to base address in rs
- *Design Principle 4: Good design demands good compromises*
 - Different formats complicate decoding, but allow 32-bit instructions uniformly
 - Keep formats as similar as possible

MIPS Instruction Coding

Instruction	Format	op	rs	rt	rd	shamt	funct	address
add	R	0	reg	reg	reg	0	32 _{ten}	n.a.
sub (subtract)	R	0	reg	reg	reg	0	34 _{ten}	n.a.
add immediate	I	8 _{ten}	reg	reg	n.a.	n.a.	n.a.	constant
lw (load word)	I	35 _{ten}	reg	reg	n.a.	n.a.	n.a.	address
sw (store word)	I	43 _{ten}	reg	reg	n.a.	n.a.	n.a.	address

Example

`A[300] = h + A[300];`

```
lw    $t0,1200($t1) # Temporary reg $t0 gets A[300]
add   $t0,$s2,$t0   # Temporary reg $t0 gets h + A[300]
sw    $t0,1200($t1) # Stores h + A[300] back into A[300]
```

Instruction	Format	op	rs	rt	rd	shamt	funct	address
add	R	0	reg	reg	reg	0	32 _{ten}	n.a.
sub (subtract)	R	0	reg	reg	reg	0	34 _{ten}	n.a.
add immediate	I	8 _{ten}	reg	reg	n.a.	n.a.	n.a.	constant
lw (load word)	I	35 _{ten}	reg	reg	n.a.	n.a.	n.a.	address
sw (store word)	I	43 _{ten}	reg	reg	n.a.	n.a.	n.a.	address

Op	rs	rt	rd	address/ shamt	funct
35	9	8		1200	
0	18	8	8	0	32
43	9	8		1200	

100011	01001	01000	0000 0100 1011 0000		
000000	10010	01000	01000	00000	100000
101011	01001	01000	0000 0100 1011 0000		

MIPS

Name	Format	Example						Comments
add	R	0	18	19	17	0	32	add \$s1,\$s2,\$s3
sub	R	0	18	19	17	0	34	sub \$s1,\$s2,\$s3
addi	I	8	18	17	100			addi \$s1,\$s2,100
lw	I	35	18	17	100			lw \$s1,100(\$s2)
sw	I	43	18	17	100			sw \$s1,100(\$s2)
Field size		6 bits	5 bits	5 bits	5 bits	5 bits	6 bits	All MIPS instructions are 32 bits long
R-format	R	op	rs	rt	rd	shamt	funct	Arithmetic instruction format
I-format	I	op	rs	rt	address			Data transfer format



Logical Operations

- Instructions for bitwise manipulation

Operation	C	Java	MIPS
Shift left	<<	<<	sll
Shift right	>>	>>>	srl
Bitwise AND	&	&	and, andi
Bitwise OR			or, ori
Bitwise NOT	~	~	nor

- Useful for extracting and inserting groups of bits in a word



Shift Operations



- shamt: how many positions to shift
- Shift left logical
 - Shift left and fill with 0 bits
 - sll by i bits multiplies by 2^i
- Shift right logical
 - Shift right and fill with 0 bits
 - srl by i bits divides by 2^i (unsigned only)

AND Operations

- Useful to mask bits in a word
 - Select some bits, clear others to 0

and \$t0, \$t1, \$t2

\$t2	0000 0000 0000 0000 0000 1101 1100 0000
\$t1	0000 0000 0000 0000 0011 1100 0000 0000
\$t0	0000 0000 0000 0000 0000 1100 0000 0000

OR Operations

- Useful to include bits in a word
 - Set some bits to 1, leave others unchanged
- or \$t0, \$t1, \$t2

\$t2 0000 0000 0000 0000 0000 1101 1100 0000

\$t1 0000 0000 0000 0000 0011 1100 0000 0000

\$t0 0000 0000 0000 0000 0011 1101 1100 0000

NOT Operations

- Useful to invert bits in a word
 - Change 0 to 1, and 1 to 0
- MIPS has NOR 3-operand instruction
 - $a \text{ NOR } b == \text{NOT} (a \text{ OR } b)$

```
nor $t0, $t1, $zero
```

Register 0: always read as zero

```
$t1 0000 0000 0000 0000 0011 1100 0000 0000
```

```
$t0 1111 1111 1111 1111 1100 0011 1111 1111
```

Conditional Operations

- Branch to a labeled instruction if a condition is true
 - Otherwise, continue sequentially
- `beq rs, rt, L1`
 - if (`rs == rt`) branch to instruction labeled L1;
- `bne rs, rt, L1`
 - if (`rs != rt`) branch to instruction labeled L1;
- `j L1`
 - unconditional jump to instruction labeled L1



Compiling If Statements


- C code:

```
if (i==j) f = g+h;  
else f = g-h;
```

- f, g, ... in \$s0, \$s1, ...

- Compiled MIPS code:

```
        bne $s3, $s4, Else  
        add $s0, $s1, $s2  
        j   Exit  
Else:   sub $s0, $s1, $s2  
Exit:   ...
```

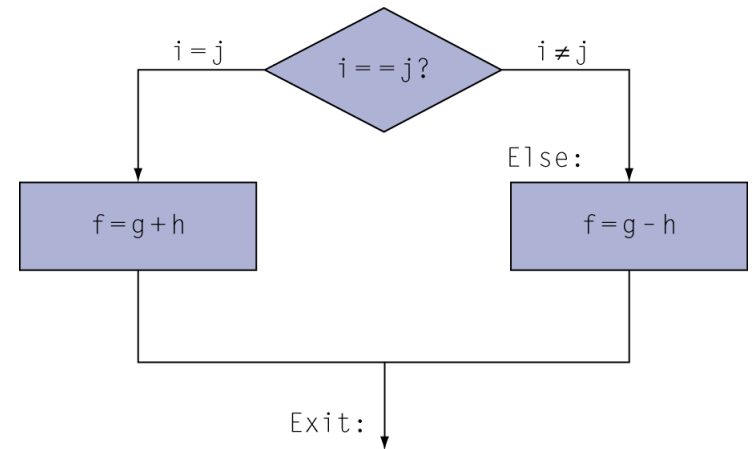

Assembler calculates addresses

Compiling Loop Statements

- C code:

```
while (save[i] == k) i += 1;
```


- i in \$s3, k in \$s5, address of save in \$s6

- Compiled MIPS code:

```
Loop:  sll    $t1, $s3, 2
       add   $t1, $t1, $s6
       lw    $t0, 0($t1)
       bne  $t0, $s5, Exit
       addi $s3, $s3, 1
       j    Loop
Exit:  ...
```

Basic Blocks

- A basic block is a sequence of instructions with
 - No embedded branches (except at end)
 - No branch targets (except at beginning)

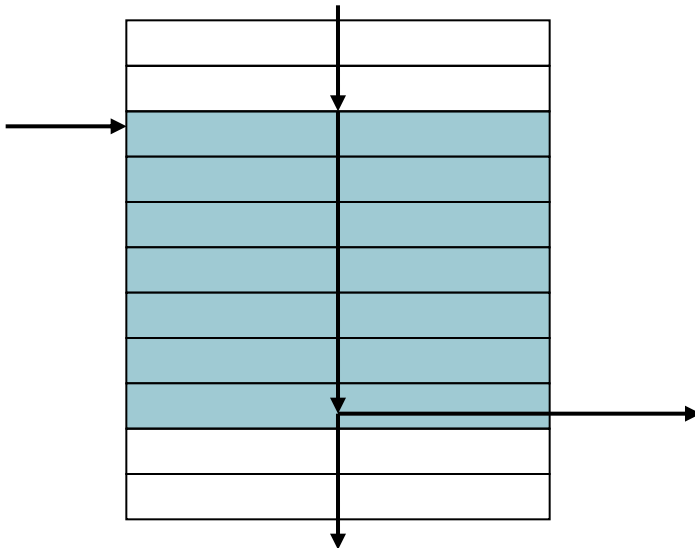

- A compiler identifies basic blocks for optimization
- An advanced processor can accelerate execution of basic blocks

More Conditional Operations

- Set result to 1 if a condition is true
 - Otherwise, set to 0
- `slt rd, rs, rt`
 - if ($rs < rt$) $rd = 1$; else $rd = 0$;
- `slti rt, rs, constant`
 - if ($rs < \text{constant}$) $rt = 1$; else $rt = 0$;
- Use in combination with `beq`, `bne`

```
    slt $t0, $s1, $s2    # if ($s1 < $s2)
    bne $t0, $zero, L    #   branch to L
```



Branch Instruction Design

- Why not b1t, bge, etc?
- Hardware for $<$, \geq , ... slower than $=$, \neq
 - Combining with branch involves more work per instruction, requiring a slower clock
 - All instructions penalized!
- beq and bne are the common case
- This is a good design compromise

Signed vs. Unsigned

- Signed comparison: `slt`, `slti`
- Unsigned comparison: `sltu`, `sltui`
- Example
 - `$s0 = 1111 1111 1111 1111 1111 1111 1111 1111`
 - `$s1 = 0000 0000 0000 0000 0000 0000 0000 0001`
 - `slt $t0, $s0, $s1 # signed`
 - $-1 < +1 \Rightarrow \$t0 = 1$
 - `sltu $t0, $s0, $s1 # unsigned`
 - $+4,294,967,295 > +1 \Rightarrow \$t0 = 0$